

EPSON CX7800 SETTING UP UTILITIES


#1  Power On - Solid Green Light

#2 Set Up Utilities

Photo/Options

Select Auto Correct  or 

Press  To Photo Enhance - To Select

Press 


Press 


Press  Start

Press  Start

Photo/Options

Borderless Printing  or 

Press  To - Max To Select


Press 


Press  Start

Press  Start

Photo/Options

Copy Quality  or 

Press  To - Photo To Select

Press 

Press  Start

Press  Start

Press Set Up/Utilities #2  to Return to Copy Menu




Once the utilities have been set up, the CX7800 will maintain those settings. However, if the Stop/Clear button is pressed you will need to perform the set up again.

COPY AND PRINT CAKE IMAGE



- #1 - Press Copy Fit To Page
- #2 - Select Letter
- #3 - Select - Plain Paper
- #4 - Select ◀ or ▶ Color or BW

Placing Photo

Open the Document Cover and place Photo face down on the glass surface in the upper left hand corner.
Move Photo 1/4" from the top and side edges
Load Frosting Sheet in the Paper Tray, Frosting side facing you.
Press Start Button  to Copy and Print